


## **BMS Magnetic Aluminum Oil Filter Cap for 2021+ Ford Bronco 2.7L V6**

Last updated 8/13/2024

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>



Carefully remove your plastic factory oil filter cap with a 27mm socket.

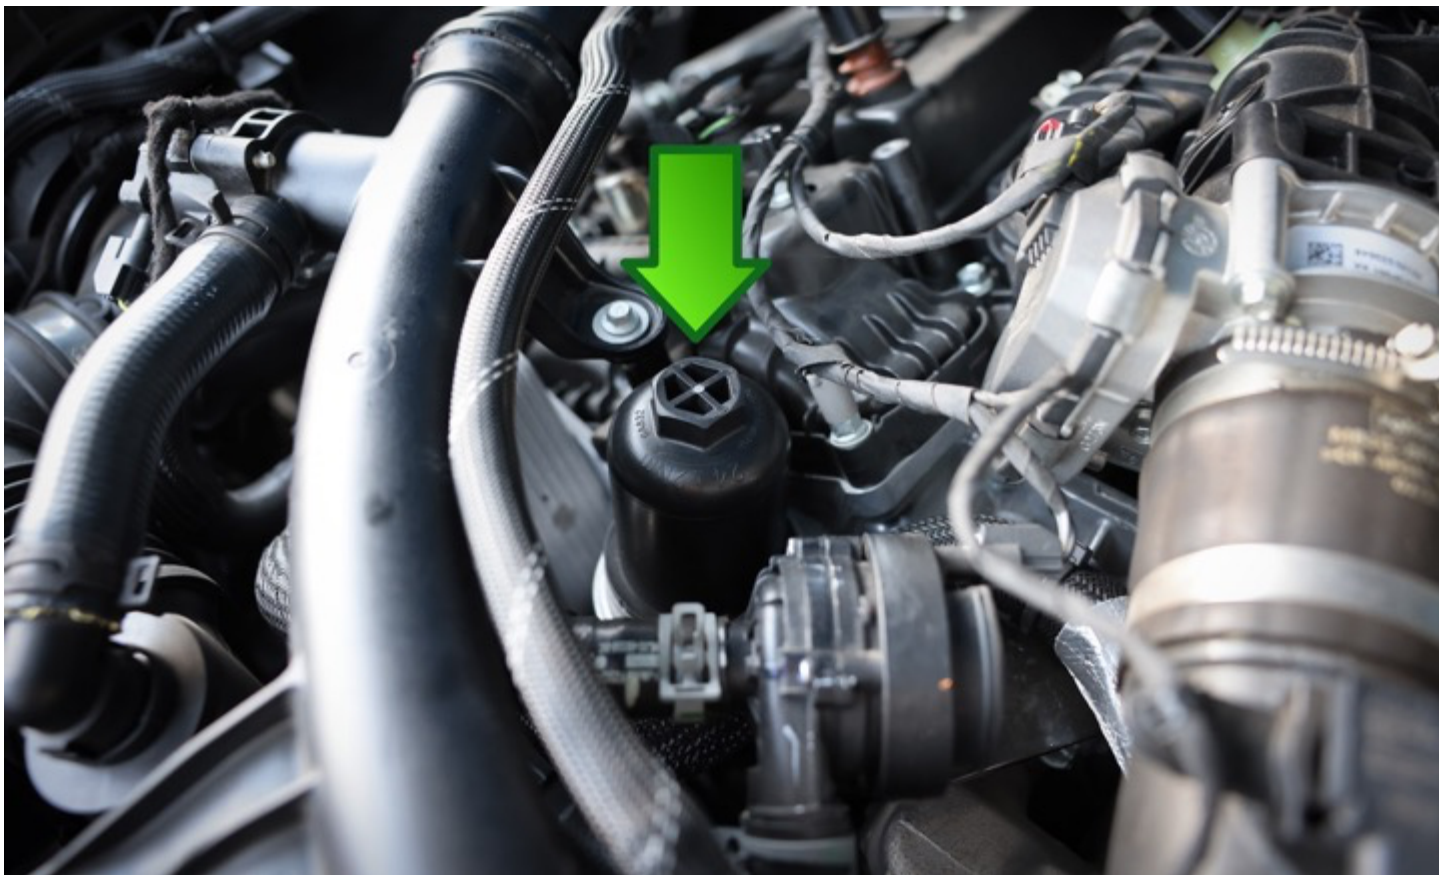

Now remove the inner plastic filter guide/support to the new BMS billet aluminum oil filter cap by carefully grabbing it by the base with pliers and rocking and pulling.



Transfer the plastic filter guide/support to the new BMS billet aluminum oil filter cap by snapping it in. It will be loose but will tighten when the cap is torqued down on the filter. Be sure to either transfer or replace the gaskets from the factory. Transfer or replace the oil filter.





Now use a 27mm socket or the recommended 1/2" drive extension to install.



Installation complete!

